

The details of Mount

"BC" Mount



BC3 mount

ZENOAH

G451, G500, G4500, G5000

HUSQVARNA

140, 234, 240S, 240SE, 340S, 340SG, 444, 440, P44, 154, 133SE, 133SG, R50, 242, 246, 248, 254, 262, 346, 357, 359, 362,

"BL" Mount



BL1 mount

ZENOAH

G2500T, G2550T, G3100T, G310, G3200, G345, G375, G380,

ECHO (KIORITZ)

CS2600, CS2700, CSV3200, CS3400, CS3500, CS3600, CS3700,

Shindaiwa

E270, E300, E305, E340, E345, E346, E350, E352, E355, E360, E361, E380, E381, E1036, E1039

Tanaka

290, 300, ECS330, ECS3500, ECS360, ECS320, ECS3301, ECS3351,

DOLMAR

ES152, ES162, PS3300, PS330, PS340, PS341, PS344, PS400, PS401, 100, 101, 102, 103, 104, 106

"BM" Mount (Length, under 45cm)



BM1 mount

ZENOAH

G2500T, G2550T, G3100T, G310, G3200, G345, G375, G380, G415, G4200,

HUSQVARNA

140, 234, 240S, 240SE, 340S, 340SG, 444, 440, P44, 154, 133SE, 133SG, R50, 242, 246, 248, 254, 262, 333, 335, 336, 346, 357, 359, 362,

ECHO (KIORITZ)

CS2600, CS2700, CSV3200, CS3400, CS3500, CS3600, CS3700, CSV3900, CSV4000, CSV4400, CSV395, CSV5001,

Shindaiwa

E270, E300, E305, E340, E345, E346, E350, E352, E355, E360, E361, E380, E381, E1036, E1039

Tanaka

290, 300, ECS330, ECS3500, ECS360, ECS320, ECS3301, ECS3351, ECS415, ECS4000, ECV4501,



BM2 mount



BM3 mount

DOLMAR

ES152, ES162, PS3300, PS330, PS340, PS341,
PS344, PS400, PS401, 100, 101, 102, 103, 104, 105
106, 108, 109, 110, 116, ES1800,

"BQ" Mount

 


BQ4 mount

Shindaiwa

E400, E440, E488, E1045,

"BX" Mount (Length, more than 45cm)

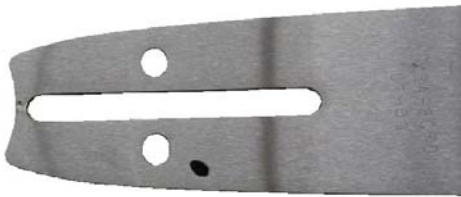

BX3 mount

ZENOAH

G345, G375, G380, G415, G4200,

ECHO(KIORITZ)

CSV3900, CSV4000, CSV4400, CSV395, CSV5001,

Tanaka

ECS415, ECS4000, ECV4501,

DOLMAR

105, 108, 109, 110, 116, ES1800,

"DR2" Mount



DR2 mount

DOLMAR

122, 123, 143, PS9000, PS9010,

"DT2" Mount



DT4 mount

DOLMAR

109, 110, 111, 115, 116, 117, 119, 120, 219,
PS6000, PS6800, PS540

"EM" Mount (Only Tough Tip)



EM1 mount

EM1M-0V25-A(1/4"P-60E)

ZENOAH

G2500T, G2550T, G3100T, G310, G3200,

ECHO (KIORITZ)

CS2600, CS2700, CSV3200, CS3400, CS3500,
CS3600, CS3700,

Shindaiwa

E270, E300, E305, E340, E345, E346, E350, E352,
E355, E360, E361, E380, E381, E1036, E1039

Tanaka

290, 300, ECS330, ECS3500, ECS360, ECS320,
ECS3301, ECS3351,

DOLMAR

ES152, ES162, PS3300, PS330, PS340, PS341,
PS344, PS400, PS401, 100, 101, 102, 103, 104, 106

"SG2" Mount



SG2 mount

STIHL

07S, 08, 08S, 050, 051, 070, 075, 076,
084, 088, 090, MS880,

"SL2" Mount



SL2 mount

STIHL

009, 010, 011, 017, 018, 021, MS170, MS190,
MS191T, MS192T, MS200, MS210, MS230, MS250,

"ST2" Mount



ST2 mount

STIHL

024, 026, 028, 034, 030, 031, 038, 040, 041,
MS240, MS260, MS280, MS290, MS310, MS360,
MS361, MS390, MS440, MS460, MS650, MS660,

"UL6" Mount (Only Carving Bar)



UL6 mount

Only Carving Bar.

ZENOAH

G2500T, G2550T, G3100T, G310, G3200,

ECHO (KIORITZ)

CS2600, CS2700, CSV3200, CS3400, CS3500,
CS3600, CS3700,

Shindaiwa

E270, E300, E305, E340, E345, E346, E350, E352,
E355, E360, E361, E380, E381, E1036, E1039

 
Tanaka

290, 300, ECS330, ECS3500, ECS360, ECS320,
ECS3301, ECS3351,

DOLMAR

ES152, ES162, PS3300, PS330, PS340, PS341,
PS344, PS400, PS401, 100, 101, 102, 103, 104, 106

"VF2" Mount

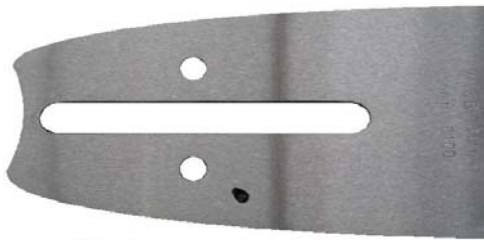

VF2 mount

HUSQVARNA

3120, 395, 288, 371, 65, 70, 1100,

"VH2" Mount



VH2 mount

HUSQVARNA

140, 234, 240S, 240SE, 340S, 340SG, 444, 440,
P44, 154, 133SE, 133SG, R50, 242, 246, 248, 254,
262, 333, 335, 336, 346, 357, 359, 362,

"VT3" Mount



VT3 mount

 
HUSQVARNA

P61, P65, P77, 160, 162, 180, 181, 260, 266,
280, 281, 285, 362, 372, 385, 394, 1100,

Shindaiwa

E580, E685, E757,

"XT2" Mount

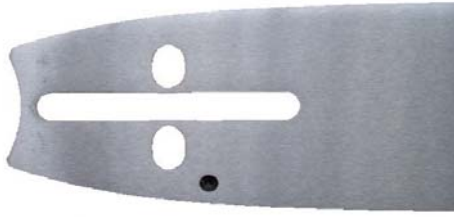

XT2 mount

ZENOAH

G621,

ECHO (KIORITZ)

CS5501, CS6701,

Tanaka

ECS505, ECS506, ECS650,